取扱説明書


OPAVM-BFLT

FLTマウントVESA変換ブラケット

この製品は、FlexScan FLTにVESA規格（100 mm×100 mm）対応のアームなどを取り付けるための金具です。

梱包品

・ブラケット



・ねじ（M3×10 mm）
- ブラケット取り付け用　2本



・ねじ（M4×10 mm）
- ブラケット取り付け用　1本
- VESAマウント取り付け用　4本




・取扱説明書（本書）

仕様

質量：約 390 g

単位：mm

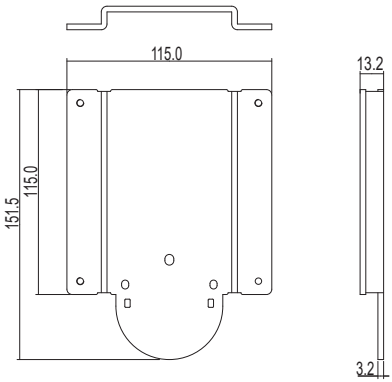


取り付け方

・必要な工具：プラスドライバー

1


アームを取り外したモニターを安定した場所に置き、2箇所のねじを取り外します。
取り外したねじは、このブラケットを使用しなくなった場合に備えて保管していただくことをお勧めします。

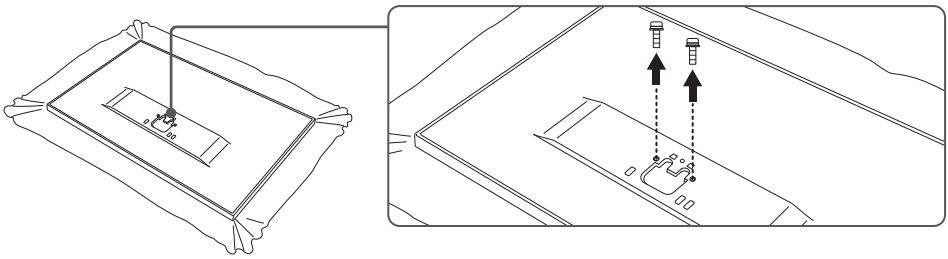

取り付け方（つづき）


2

ガイドスロットをガイドピンに合わせ、ずれないように支えながら、付属のブラケット取り付け用ねじで
ブラケットをモニターに仮留めします（3箇所）。

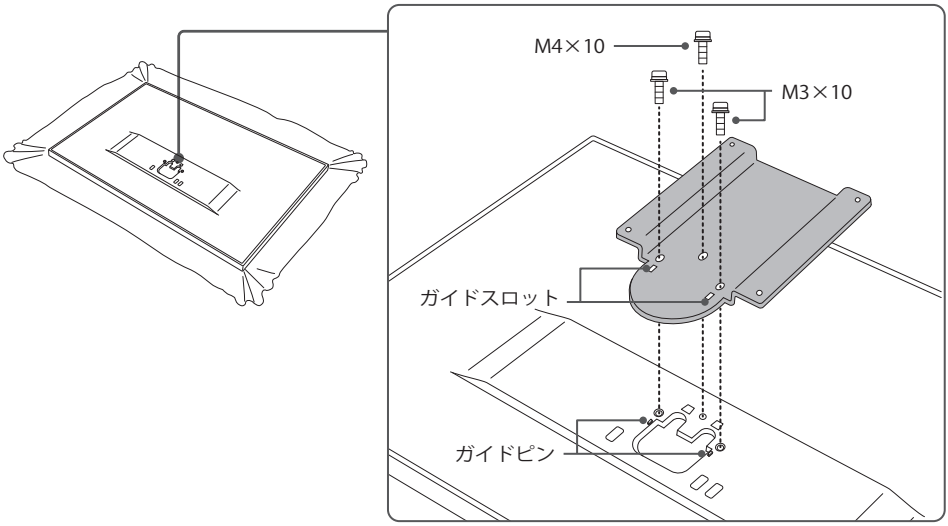

3

仮留めしたねじをしっかりと締め直し、ブラケットがしっかりと固定されていることを確認します。

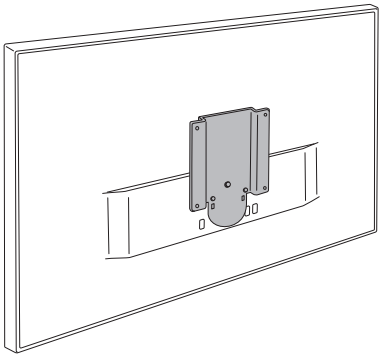

注意点

・定期的にねじの締め付けを確認してください。締め付けが不十分な場合、モニターが外れ、けがや故障の原因になります。

User's Manual


OPAVM-BFLT

VESA Mounting Bracket for FlexScan FLT

This product is a bracket for attaching VESA-compliant (100 mm × 100 mm) arms or other accessories to FlexScan FLT.

Included Items

- Bracket



- Screw (M3 x 10 mm)
  - Bracket mounting screw x 2



- Screw (M4 x 10 mm)
  - Bracket mounting screw x 1
  - VESA mounting screw x 4




- User's Manual (this document)

Specifications

Weight: Approx. 390 g

Unit: mm

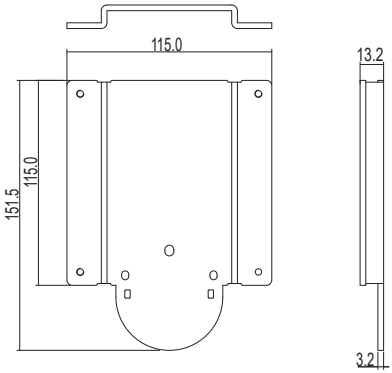


Installation Instructions

- Tools Required: Phillips screwdriver

1


Place the monitor with the arm removed on a stable surface and remove the two screws.
We recommend keeping the removed screws in case you stop using this bracket in the future.

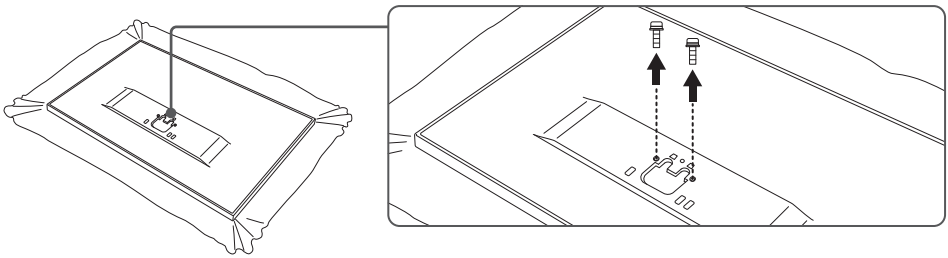

Installation Instructions (Continued)


2

Align the guide slots with the guide pins, and while supporting the bracket to prevent shifting, temporarily fasten the bracket to the monitor using the included screws (three locations).

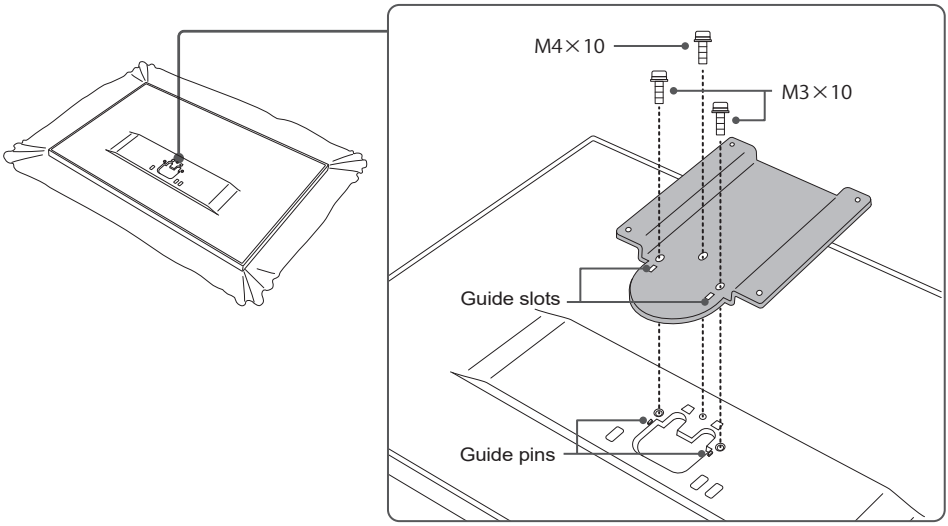

3

Tighten the temporarily fastened screws securely and make sure the bracket is firmly fixed in place.

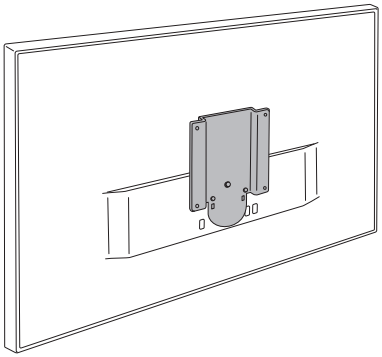

Attention

- Check the tightness of the screws periodically. If the screws are not tightened securely, the monitor may detach, which could result in injury or damage.

Copyright © 2025 - 2026 EIZO Corporation. All rights reserved.