

# Firmware Update Procedure

This document describes the procedure for updating the firmware on the FDX1502N/FDX1502NT/FDS1702N/FDS1702NT (hereafter referred to as the "monitor").


The firmware can be upgraded using the Web Browser Interface of the monitor.


## Attention

- Before you start, please make sure that both your PC and monitor are connected to a wired LAN.


1. Click "Start" - "All Programs" - "NetDA Manager" - "NetDA Manager".

The NetDA Manager starts, the main window is displayed.


2. Select the monitor you wish to upgrade the firmware for and click "Web page launch" (  ).

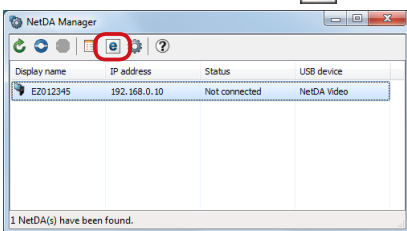

3. Click "Firmware Update" under "Maintenance".

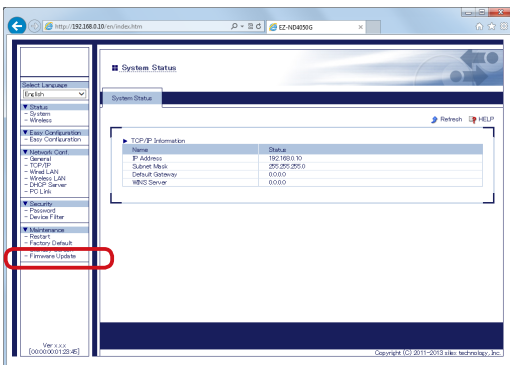


4. When the user authentication screen is displayed, enter the user name (root) and password and click "OK".

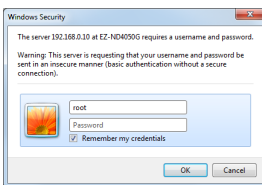

## Note

- No password is set by factory default.



5. Click "Browse..." and select the file to be loaded to the monitor (EZ-ND40x0G.bin) and click "Open".
6. Check that the file name is displayed in "New firmware" and click "Update".

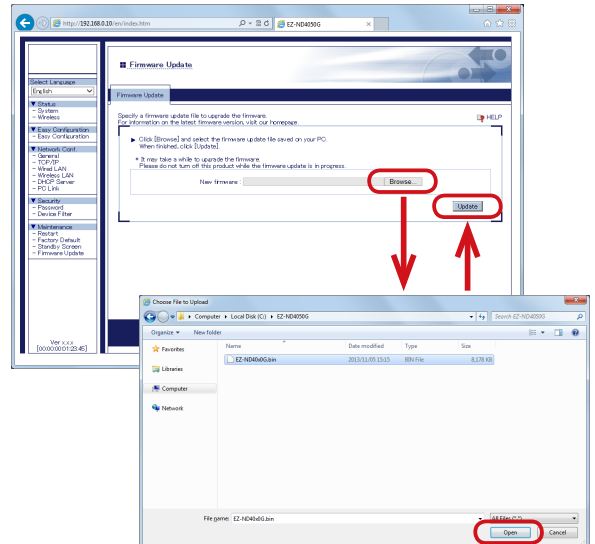

7. The update confirmation message is displayed. Click "OK" to begin the firmware upgrade.

## Attention

- Do not turn off the monitor or finish the Web browser while the firmware upgrade is in process.

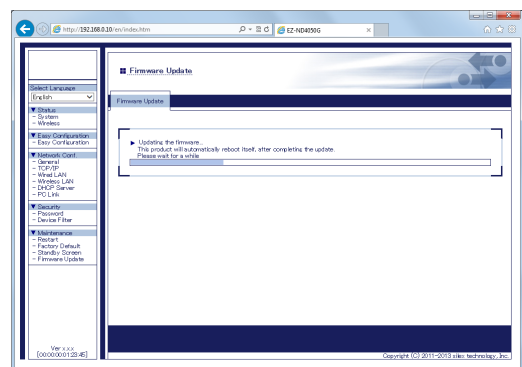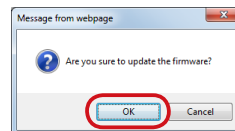

8. When the default screen of the "Firmware Update" page is displayed the firmware upgrade is complete.

Refresh the Web page in the browser and check that the version information at the lower left of the page has been updated.




# ファームウェアアップデート手順


本書では、FDX1502N/FDX1502NT/FDS1702N/FDS1702NT（以降「モニター」）のファームウェアのアップデート手順について記載しています。

モニターのファームウェアアップデートは、NetDA ManagerからモニターのWebページにアクセスしておこないます。


## 注意点

- ファームウェアをアップデートするときは、モニターとコンピュータを有線LANで接続してください。

- 「スタート」－「（すべての）プログラム」－「NetDA Manager」から「NetDA Manager」をクリックします。  
NetDA Managerが起動してメイン画面が表示されます。
- ファームウェアをアップデートするモニターを選択して、「Webページを表示」（)をクリックします。

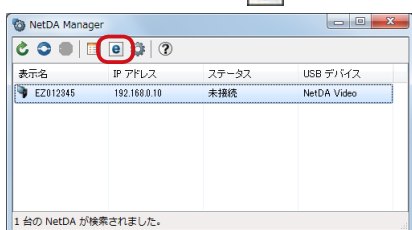

- 「メンテナンス情報」の下にある、「ファームウェアアップデート」をクリックします。

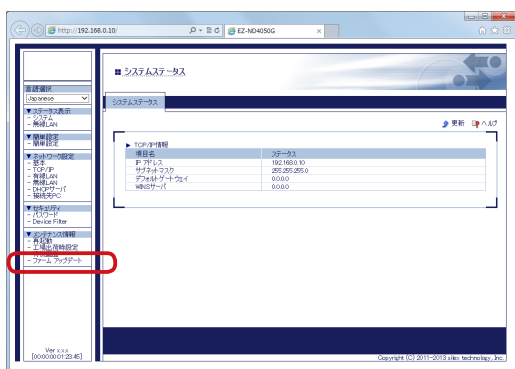


- ユーザー認証画面が表示されますので、ユーザー名（root）とパスワードを入力し、「OK」をクリックします。



## 参考

- パスワードは、初期設定では設定されていません。



- 「参照...」ボタンをクリックして、アップデートファイル（EZ-ND40x0G.bin）を選択し、「開く」をクリックします。
- 「新しいファームウェア」にファイル名が表示されていることを確認して、「アップデート」をクリックします。

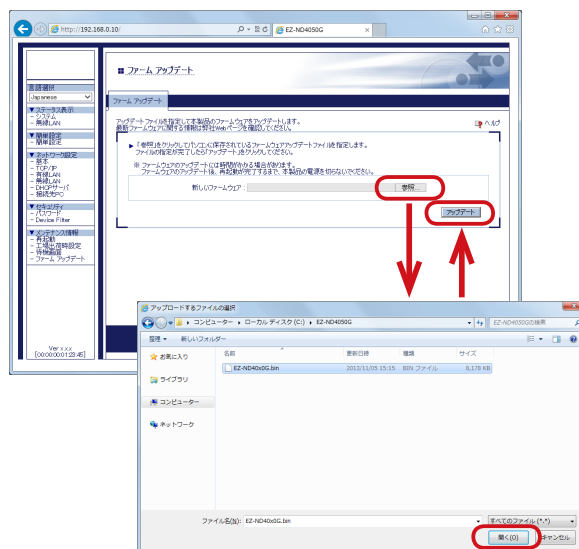

- 確認画面が表示されますので、「OK」をクリックします。  
ファームウェアのアップデートが開始されます。

## 注意点

- ファームウェアのアップデート中は、モニターの電源を切り、Webブラウザを終了したりしないでください。

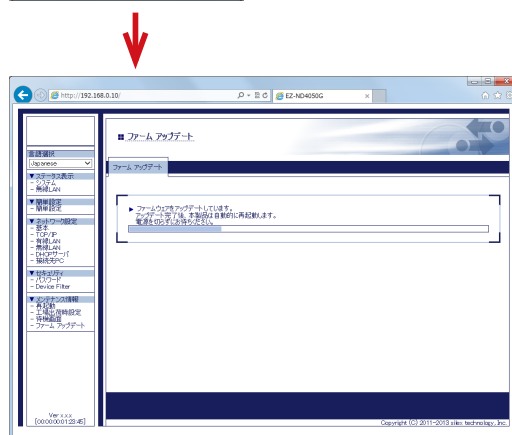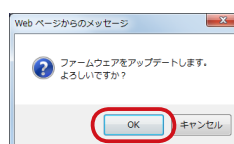

- 「ファームウェアアップデート」のページの初期画面に戻ったら、ファームウェアのアップデートは完了です。  
ブラウザを更新して、Webページの左下のバージョン表記が更新されていることを確認してください。