取扱説明書

OPAVM-PCG1

CG1 用 VESA マウンティングプレート

この製品は、ColorEdge PROMINENCE CG1にVESA規格対応のスタンドなどを取り付けるための金具です。
ご使用前には、本書およびColorEdge PROMINENCE CG1の「使用上の注意」をよく読み、必ずお守りください。


梱包品

- マウンティングプレート
- 取扱説明書（本書）

仕様

質量：約 3.5 kg

単位：mm

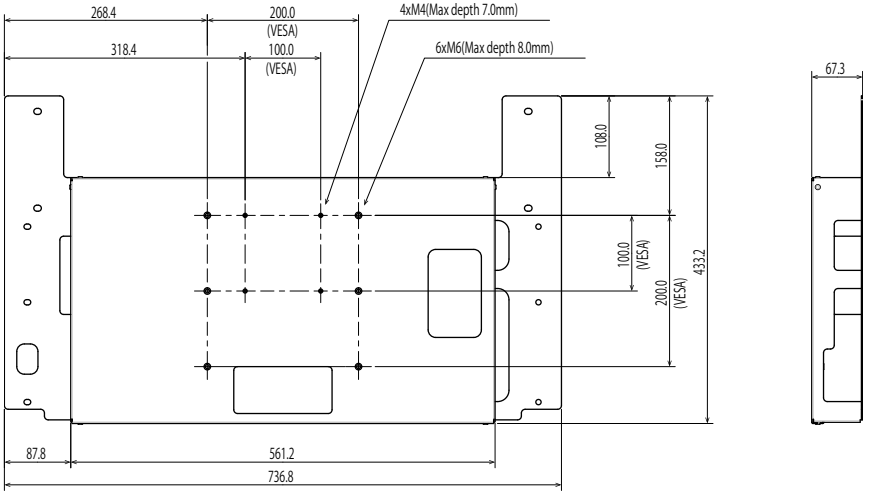

マウンティングプレートの取り付け方


- 必要な工具：プラスドライバー

1. 安定した場所に柔らかい布またはクッションを敷き、モニター前面の内蔵センサーや調整ダイヤルの突起部、およびスタンドに荷重がかからないようにして、液晶パネル面を下に向けて置きます。


注意点

- モニターを持ち上げるときは、必ず2人以上で作業してください。

2. 次の箇所のねじをモニターから取り外し、ハンドルを取り外します。取り外したねじとハンドルは、後で使用します。
   ・ハンドルを固定する 4 箇所のねじ（M6 × 25 mm）・・・下図 A
   ・背面両側の 6 箇所のねじ（M6 × 8 mm）・・・下図 B

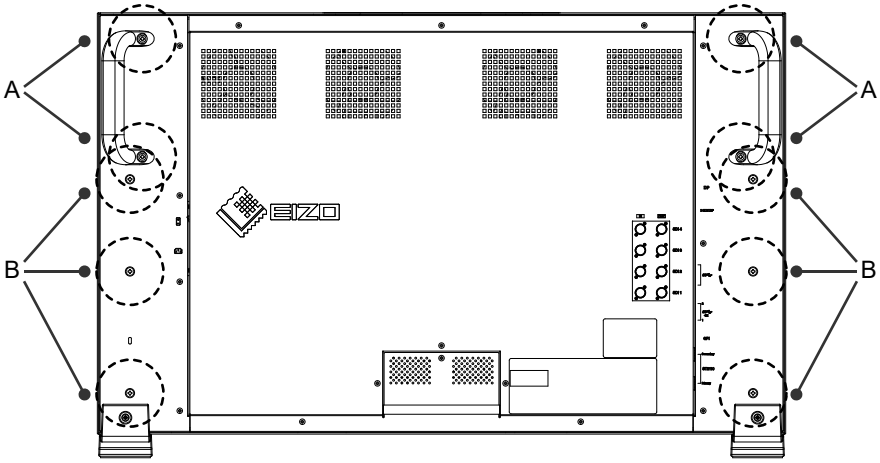


3. 位置を合わせて、マウンティングプレートをモニター背面に配置します。

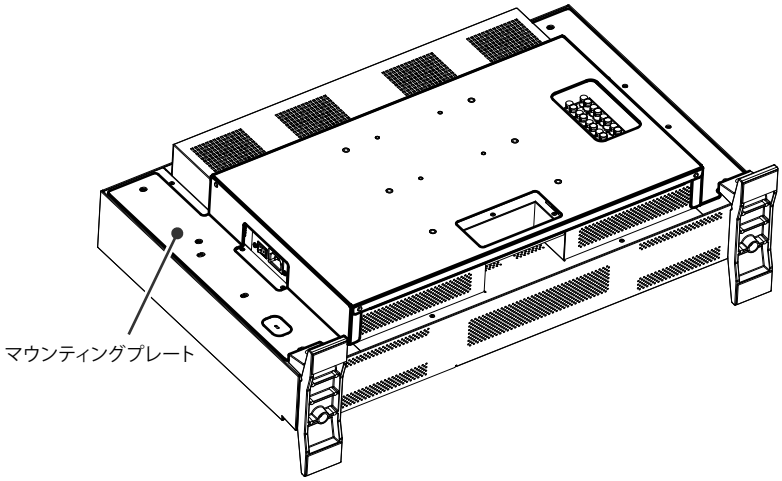

4. 手順2で取り外したねじとハンドルを再度取り付け、マウンティングプレートを確実に固定します。
   - ハンドルを固定する 4 箇所のねじ（M6 × 25 mm）・・・下図 A
     - 締め付けトルク：1.18 N･m～0.2 N･m
   - 背面両側の 6 箇所のねじ（M6 × 8 mm）・・・下図 B
     - 締め付けトルク：1.18 N･m～0.2 N･m

注意点

- 定期的にねじの締め付けを確認してください。締め付けが不十分な場合、マウンティングプレートが外れてモニターが落下し、けがや故障の原因になります。

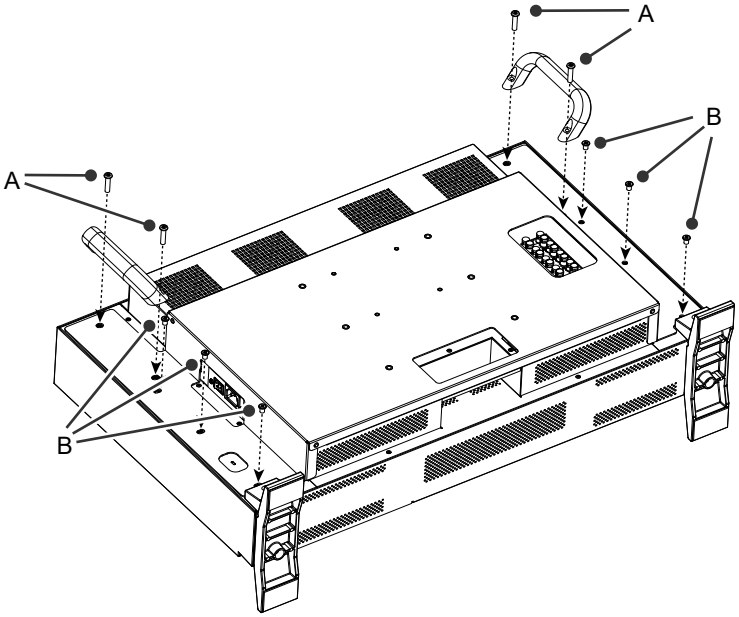

スタンドまたはアームの取り付け方

マウンティングプレートを装着したモニターを、VESA 規格対応の市販のスタンドまたはアームに取り付けます。

- 工具：使用するねじに合った工具（プラスドライバなど）
- 対応ねじ穴ピッチ：100 mm × 100 mm、100 mm × 200 mm、200 mm × 200 mm
- 設置条件
  - 設置方向：横置き（回転なし）
  - 表示面は角度を付けず垂直になるように設置してください。

1. マウンティングプレートのねじ穴と、スタンドまたはアームの取付部のねじ穴を合わせます。
2. 市販のねじで、スタンドまたはアームをマウンティングプレートに固定します。
3. 取り付け後、ねじが確実に締め付けられていることを確認します。


注意点

- VESA規格準拠のスタンドまたはアームを使用してください。
- スタンドまたはアームは、モニター本体（約17.5 kg）、マウンティングプレート（約3.5 kg）およびケーブルなどの装着物の総質量に耐えられるものを使用してください。
- 設置可能な方向および角度以外で使用しないでください。
- スタンドまたはアームの取り付けには、次の条件を満たす市販のねじをご使用ください。
  ねじの長さは、スタンドまたはアームの取付部の厚み、ワッシャーを使用する場合はワッシャーの厚み、およびねじ挿入深さを考慮して選定してください。
  - 100 mm × 100 mmの場合：M4ねじ
  - 100 mm × 200 mm、200 mm × 200 mmの場合：M6ねじ
    マウンティングプレートへのねじの挿入深さは、次の値を超えないようにしてください。
  - M4ねじ：7.0 mm以下
  - M6ねじ：8.0 mm以下
- スタンドまたはアームの取扱説明書の指示に従って取り付けてください。
- モニターは重いため、落下させるとけがや故障の原因になります。
  取り付けや取り外しは必ず2人以上でおこなってください。
- 定期的にねじの締め付けを確認してください。締め付けが不十分な場合、モニターが外れ、けがや故障の原因になります。

参考

ColorEdge PROMINENCE CG1 のスタンド部分を取り外して使用することもできます。

1. スタンド部分を固定しているねじを外し、左右のスタンド部分を取り外します。

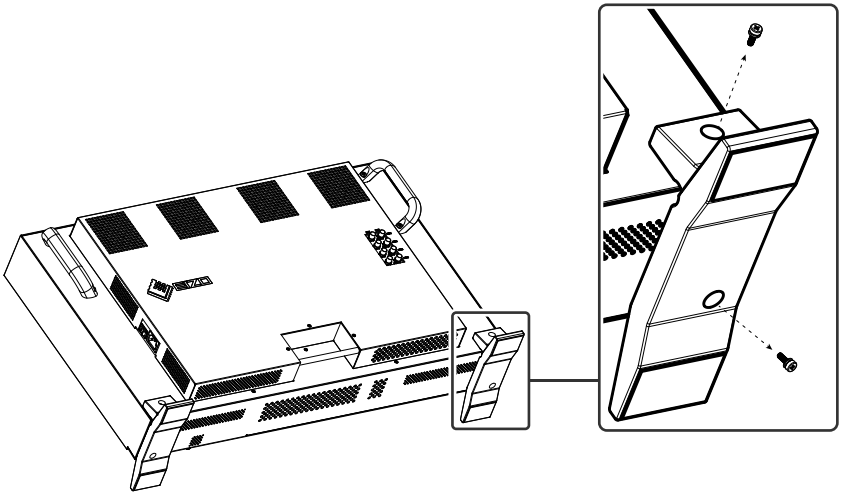

注意点

- 取り外したねじは、再度スタンドを取り付ける場合に使用します。紛失しないよう保管してください。

User's Manual

OPAVM-PCG1

VESA Mounting Plate for CG1

This product is a bracket for attaching stands and other equipment compatible with VESA standards to the ColorEdge PROMINENCE CG1.
Before use, read this document and "PRECAUTIONS" for the ColorEdge PROMINENCE CG1 carefully, and be sure to observe them.


Included Items

- Mounting plate
- User's Manual (this document)

Specifications

Weight: Approx. 3.5 kg

Unit: mm

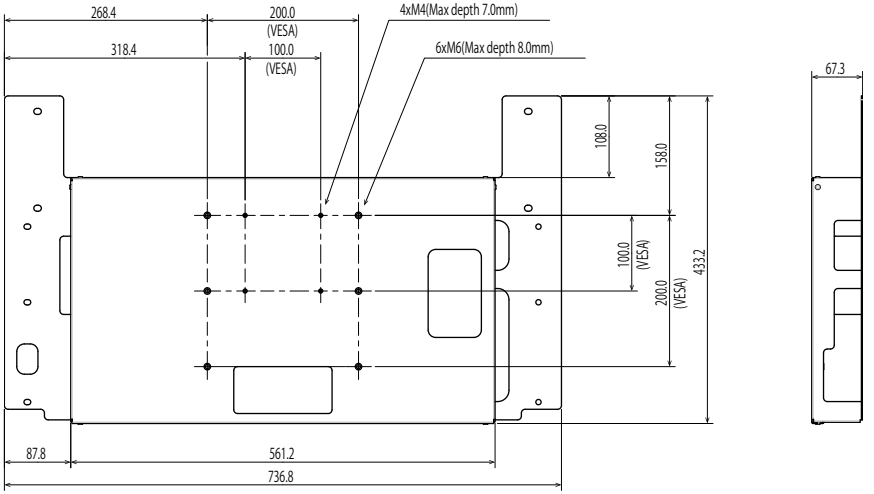

How to Attach the Mounting Plate


- Necessary tools: Phillips screwdriver

1. Spread a soft cloth or cushion on a stable surface, and ensure that no load is applied to the built-in sensor on the front of the monitor, the protrusion of the adjustment dial, and the stand, then place the monitor with the LCD panel surface facing down.


Attention

- When lifting the monitor, be sure to work with two or more people.

2. Remove the screws at the following locations from the monitor, and remove the handle. The removed screws and handle will be used later.
   - Screws at 4 locations for securing the handle (M6 x 25 mm) ... Figure A below
   - Screws at 6 locations on both sides of the rear (M6 x 8 mm) ... Figure B below

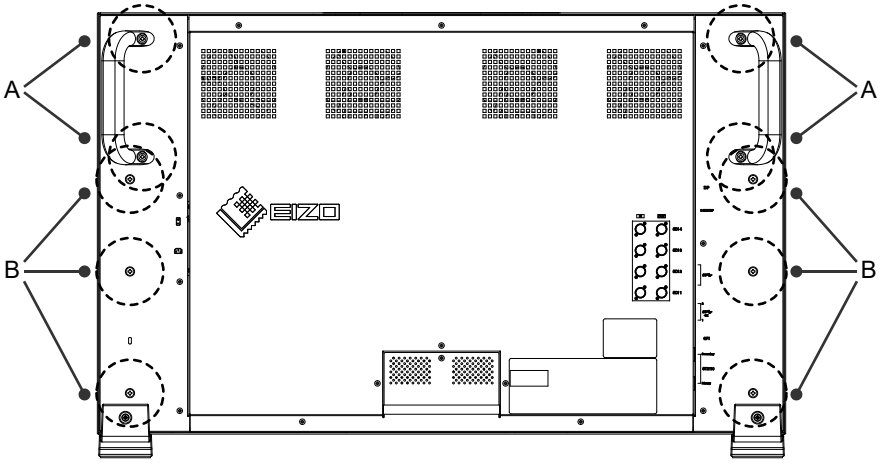


3. Align and place the mounting plate on the back of the monitor.

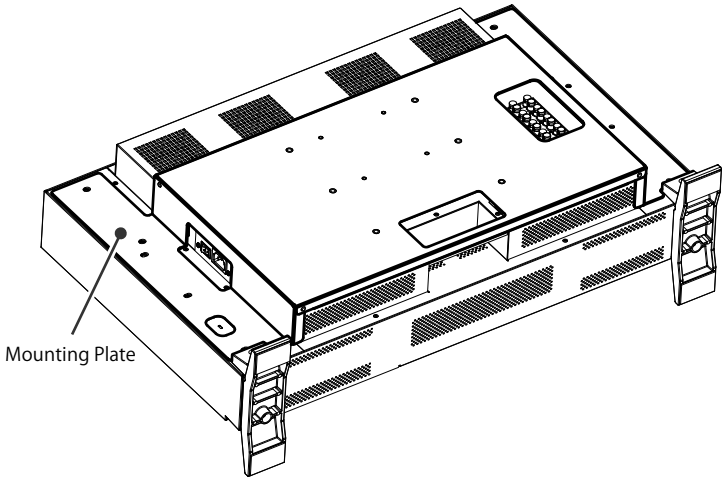

4. Reinstall the screws and handle that were removed in Step 2, and securely fasten the mounting plate.
   - Screws at 4 locations for securing the handle (M6 x 25 mm) ... Figure A below
     - Tightening torque: 1.18 – 0.2 N·m
   - Screws at 6 locations on both sides of the rear (M6 x 8 mm) ... Figure B below
     - Tightening torque: 1.18 – 0.2 N·m

Attention

- Check the tightness of the screws periodically. If the screws are not sufficiently tight, the mounting plate may come loose and the monitor may fall, resulting in injury or malfunction.

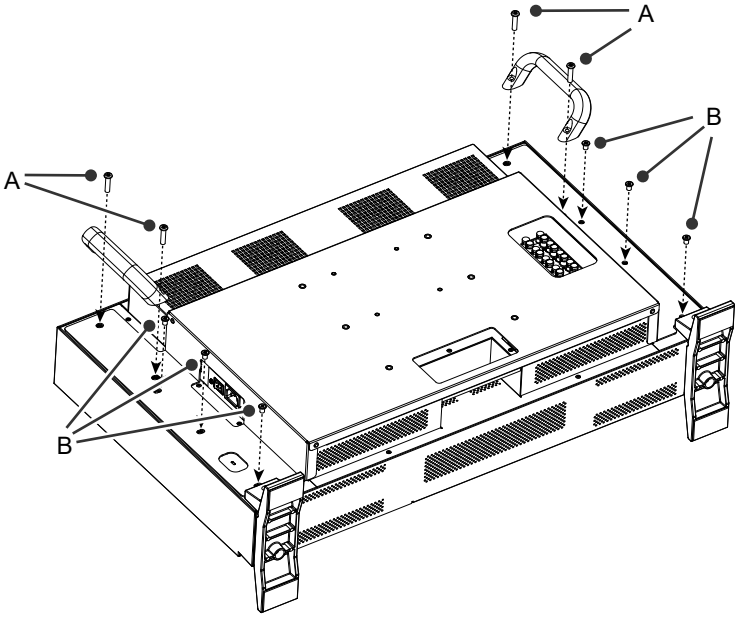

How to Attach a Stand or Arm

Attach the monitor with the mounting plate installed to a commercially available stand or arm that supports VESA standards.

- Tools: Tool suitable for the screws used (such as a Phillips screwdriver)
- Compatible screw hole pitch: 100 mm x 100 mm, 100 mm x 200 mm, 200 mm x 200 mm
- Installation conditions
  - Installation orientation: Landscape (no rotation)
  - Install the monitor so that the display surface is perpendicular without angling it.

1. Align the screw holes of the mounting plate with the screw holes on the mounting part of the stand or arm.
2. Secure the stand or arm to the mounting plate with commercially available screws.
3. After installation, confirm that the screws are securely tightened.


Attention

- Use a stand or arm that complies with VESA standards.
- Use a stand or arm that can withstand the total weight of the monitor body (approx. 17.5 kg), mounting plate (approx. 3.5 kg), and attached objects such as cables.
- Do not use the product in directions or angles other than those that can be installed.
- For attaching the stand or arm, use commercially available screws that meet the following conditions:
  Select the screw length by taking into account the thickness of the mounting part of the stand or arm, the thickness of the washer when using a washer, and the screw insertion depth.
  - For 100 mm x 100 mm: M4 screw
  - For 100 mm x 200 mm and 200 mm x 200 mm: M6 screw
    Ensure that the screw insertion depth into the mounting plate does not exceed the following values:
  - M4 screw: 7.0 mm or less
  - M6 screw: 8.0 mm or less
- Follow the instructions in the User's Manual for the stand or arm to attach it.
- Because the monitor is heavy, dropping it may cause injury or malfunction.
  Be sure to carry out installation or removal with two or more people.
- Check the tightness of the screws periodically. If the tightening is insufficient, the monitor may detach, causing injury or malfunction.

Reference

The stand section of the ColorEdge PROMINENCE CG1 can also be removed for use.

1. Remove the screws securing the stand section, and detach the left and right stand sections.

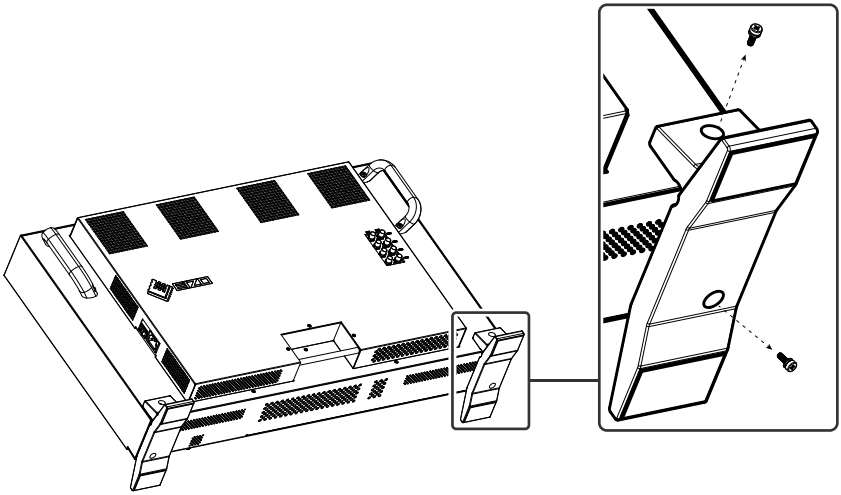

Attention

- Keep the removed screws for reuse when reattaching the stand. Store them carefully so they are not lost.

Copyright © 2026 EIZO Corporation. All rights reserved.

00N0N767A1
UM-OPAVM-PCG1